



## Ceiling Light Wall Switch Kit

### User's Manual



Made in China



is a trademark of General Electric Company and is used under license to Jasco Products Company LLC, 311 N.W. 122nd Street, Oklahoma City, OK 73114  
www.jascoproducts.com



51137-2  
12/5/06

- Enclosed you will find
- (1) Wall Mount Control
  - Double-Sided Tape / Screws (for mounting)
  - (1) Socket Adapter

**The GE SmartHome™ Plus advantage**  
Any transmitter in the GE SmartHome™ product line is capable of controlling every receiver—the ultimate in home convenience. Control any number of light fixtures or appliances from up to 150ft.\* away by choosing the transmitter and receiver combination that best suits your needs.

### WARNING

#### Risk of electric shock

- Turn power off before inspection, installation or removal
- Keep children away
- Use indoors only
- Do not use in wet locations
- Screw in securely

#### Risk of fire


- Do not exceed electrical ratings



To extend the range of the transmitters and receivers in your system, use the GE SmartHome™ Range Extender (sold separately).



Range Extender  
RF100RXTX

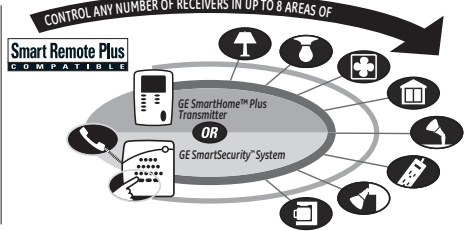

#### Expanding your system

The GE SmartHome™ devices operate on any of 8 user-settable channels. The channels are easy to set / adjust – with the simple turn of a knob. Set up your GE SmartHome™ by purchasing as many transmitters and receivers as you need. The following table is just one example of how you can configure your SmartHome™ system:

Area	CH	Transmitters	Receivers
Bedroom	1	Bedside - Wall Mount Control Entrance - Wall Mount Control	(2) Bedside Lamps - (2) Socket Adapters Corner Torchiere - Indoor Outlet Adapter Overhead Light Fixture - Wall Switch Entertainment System - Indoor Outlet Adapter
	2	Coffee Table - Timer/Controller Entrance - Wall Mount Control	(2) End Table Lamps - (2) Socket Adapters Overhead Light Fixture - Wall Switch Entertainment System - Indoor Outlet Adapter Christmas Tree - Indoor Outlet Adapter
Living Room	3		Window Santa - Indoor Outlet Adapter Lighted Poinsettia - Indoor Outlet Adapter
	4	Entrance - Wall Mount Control	(4) Overhead Can Fixtures - (4) Socket Adapters (2) Fluorescent Fixtures - (2) Indoor Outlet Adapters
Garage	5	Entrance - Wall Mount Control	(2) Fluorescent Fixtures - (2) Outdoor Outlet Adapters Overhead Light Fixture - Wall Switch
	6	Foyer - Wall Mount Control Car Keys - Key Chain Remote	Entry Light - Wall Switch Coach Lantern - Wall Switch
Outdoor	7		Christmas Lights - Outdoor Outlet Adapter Yard Santa - Outdoor Outlet Adapter
	8	Entrance - Wall Mount Control	Coffee Maker - Indoor Outlet Adapter

The following GE SmartHome™ transmitters (sold separately) can control THIS receiver:



Key Chain Remote  
RF100TXPS



Wireless Remote Transmitter  
RF102TXPS



Complete Home Control  
RF2000KINPS



Motion-Sensing Control  
RF613TX

The transmitters above can also control the following GE SmartHome™ receivers (sold separately):



Indoor Receiver Module  
RF100RXPS



Outdoor Receiver Module  
RF106RXPS



Socket Adapter  
RF104RXPS



Wall Switch  
RF102RXPS

**IMPORTANT!** These devices are NOT compatible with devices from other systems. You must purchase GE SmartHome™ transmitters and receivers to ensure compatibility.

#### Operating Instructions - Socket Adapter

FOR INDOOR USE ONLY

1. Turn the unit upside down and find the slot labeled HOUSE CODE.
2. Set the HOUSE CODE to any one of the following settings:



A



B



C



D

**NOTE:** Make sure ALL your GE SmartHome™ devices have the same HOUSE CODE setting. The transmitters WILL NOT control the receivers if they have different HOUSE CODE settings.

**IMPORTANT!** HOUSE CODES help eliminate interference (devices randomly turn on / off). If you experience interference, change the HOUSE CODE on all your GE SmartHome™ Plus transmitters and receivers to a different setting.

3. Keeping the unit upside down, set the CHANNEL by using the knob as shown.

**NOTE:** If you set your Socket Adapter to CHANNEL 1, the unit can be controlled using any transmitter set to CHANNEL 1. If you set your Socket Adapter to CHANNEL 2, the unit can be controlled using any transmitter set to CHANNEL 2 ... and so on.

**IMPORTANT!** A transmitter will control a receiver ONLY if they have the same HOUSE CODE and CHANNEL settings.

4. Remove power from the lamp socket.
5. Screw the Socket Adapter into a 125VAC socket.
6. Screw the light bulb you wish to control into the Socket Adapter as shown.
7. Apply power to the lamp socket.

The following are examples of devices you can control with your Socket Adapter:



LAMP



ENERGY-SAVING BULB



CEILING LIGHT

**CAUTION: WHEN THE INDICATOR LIGHT IS ON, THE OUTPUT SOCKET IS POWERED. DO NOT SCREW / UNSCREW BULBS INTO / FROM THE SOCKET ONCE IT IS POWERED.**

#### Operating Instructions - Wall Mount Control

1. Find the slot labeled HOUSE CODE on the back of the unit.
2. Set the HOUSE CODE to any one of the settings shown.
3. Set the CHANNEL by using the knob on front as shown.



ON 1 2



ON 1 2



**NOTE:** If you set your Wall Mount Control to CHANNEL 1, the unit can control any receiver set to CHANNEL 1. If you set your Wall Mount Control to CHANNEL 2, the unit can control any receiver set to CHANNEL 2 ... and so on.

4. Mounting

**NOTE:** Mounting the Wall Mount Control on masonry or metal walls may degrade the functional range.

Tape Mounting

- A. Make sure surfaces are free of dust, oil and other substances that could affect adhesion.
- B. Attach the double-sided tape to back of the Wall Mount Control housing.
- C. Press tape firmly to the mounting surface.

Screw Mounting

- A. Using a slotted screwdriver, remove the faceplate of the Wall Mount Control.
- B. Place the detached back plate where desired and mark screw locations.
- C. Insert the mounting screws into the back plate holes and screw into place.
- D. Replace the Wall Mount Control faceplate.

5. Use the toggle button to activate the Wall Mount Control (ON/OFF operation). Make sure to press firmly and for a minimum of 1 second for best results. An indicator lights RED when a signal is sent.

6. Using any of the receivers set to the same CHANNEL and HOUSE CODE, test the installation by using the ON and OFF buttons.

If your unit does not work properly or if you want additional assistance, please call 1-800-654-8483. We would be happy to answer ALL of your questions. Visit us on the web at [www.GESmartHome.com](http://www.GESmartHome.com) to download application notes, manuals and to find out more about the GE SmartHome™ product line!

#### Specifications

##### Wall Mount Control

Battery Type ..... Use ONLY A23 (12V) Alkaline

**NOTE:** The functional range will decrease as the battery wears out so make sure to replace the battery every 6 months for best results.

##### Socket Adapter

FOR INDOOR USE ONLY

DO NOT EXCEED ELECTRICAL RATINGS

Electrical Rating ..... 120V, 60Hz  
Maximum Tungsten Load ..... 200W

\*Functional range may be adversely affected by one or more of the following factors: weather, radio frequency interference, low transmitter battery and obstructions between the transmitter and receiver.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and;
2. This device must accept any interference received, including interference that may cause undesired operation.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**90 DAY LIMITED WARRANTY:** Jasco Products Company warrants this product to be free from manufacturing defects for a period of ninety days from the original date of consumer purchase. This warranty is limited to the repair or replacement of this product only and does not extend to consequential or incidental damage to other products that may be used with this unit. This warranty is in lieu of all other warranties express or implied. Some states do not allow limitations on how long an implied warranty lasts or permit the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state. If unit should prove defective within the warranty period, return prepaid with dated proof of purchase to:  
Jasco Products Company, 311 N.W. 122nd, Oklahoma City, OK, 73114